



1) Take out the product and accessories from the package, and prepare the concentrate/distillate with appropriate temperature.




2) Connect the oil gun to the temperature control box, tighten and fix it.



3) Energize the temperature control box, and switch it on. The red light is always on.



4) Set the constant temperature (green value) on the panel of the temperature control box. The red value is the temperature of the heating rod in the gun. When heating, the green light is on.

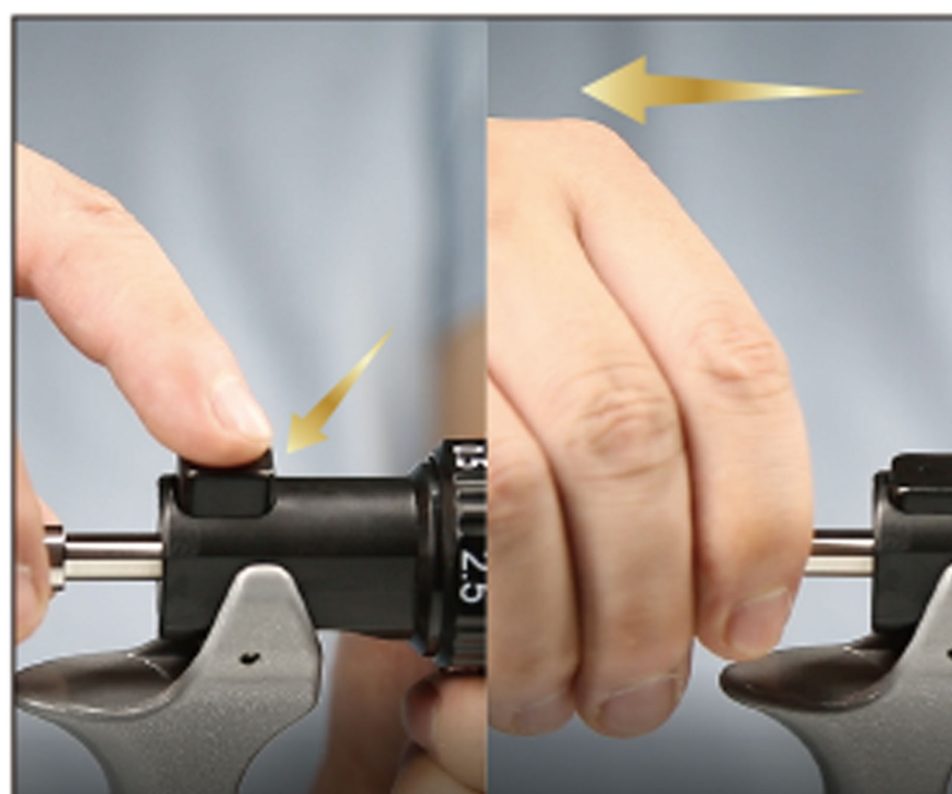

5) Press down the release key, hold the gun tube with one hand, and pull the push-pull rod with the other hand to suck the concentrate/distillate into the gun tube.



6) Erect the oil gun, let the bubbles move to the top of the gun tube, and pull the handle to release the bubbles.



7) Install the pinhead well at the gun nozzle position, and get ready.



### Warning:

Note: please do not make long heating under conditions of equipment idling.

### Tips:

- 1). The panel of the temperature control box shows the degree Celsius. The temperature of the heating oil should not be too high, about 80 degrees Celsius.
- 2). Because THC oil is too thick, choose a thicker needle or heat the oil until it flows well and start filling.
- 3). After the needle is used, the needle must be preheated and cleaned when it is cooled and reused. Make sure the needle is unobstructed before use.